


PARTS LIST:

ASSEMBLY INSTRUCTIONS FOR FUN3535 WEREWOLF
THIS IS NOT A TOY. 14+ AGE. PLEASE FOLLOW DIRECTIONS FOR EASY SET-UP.

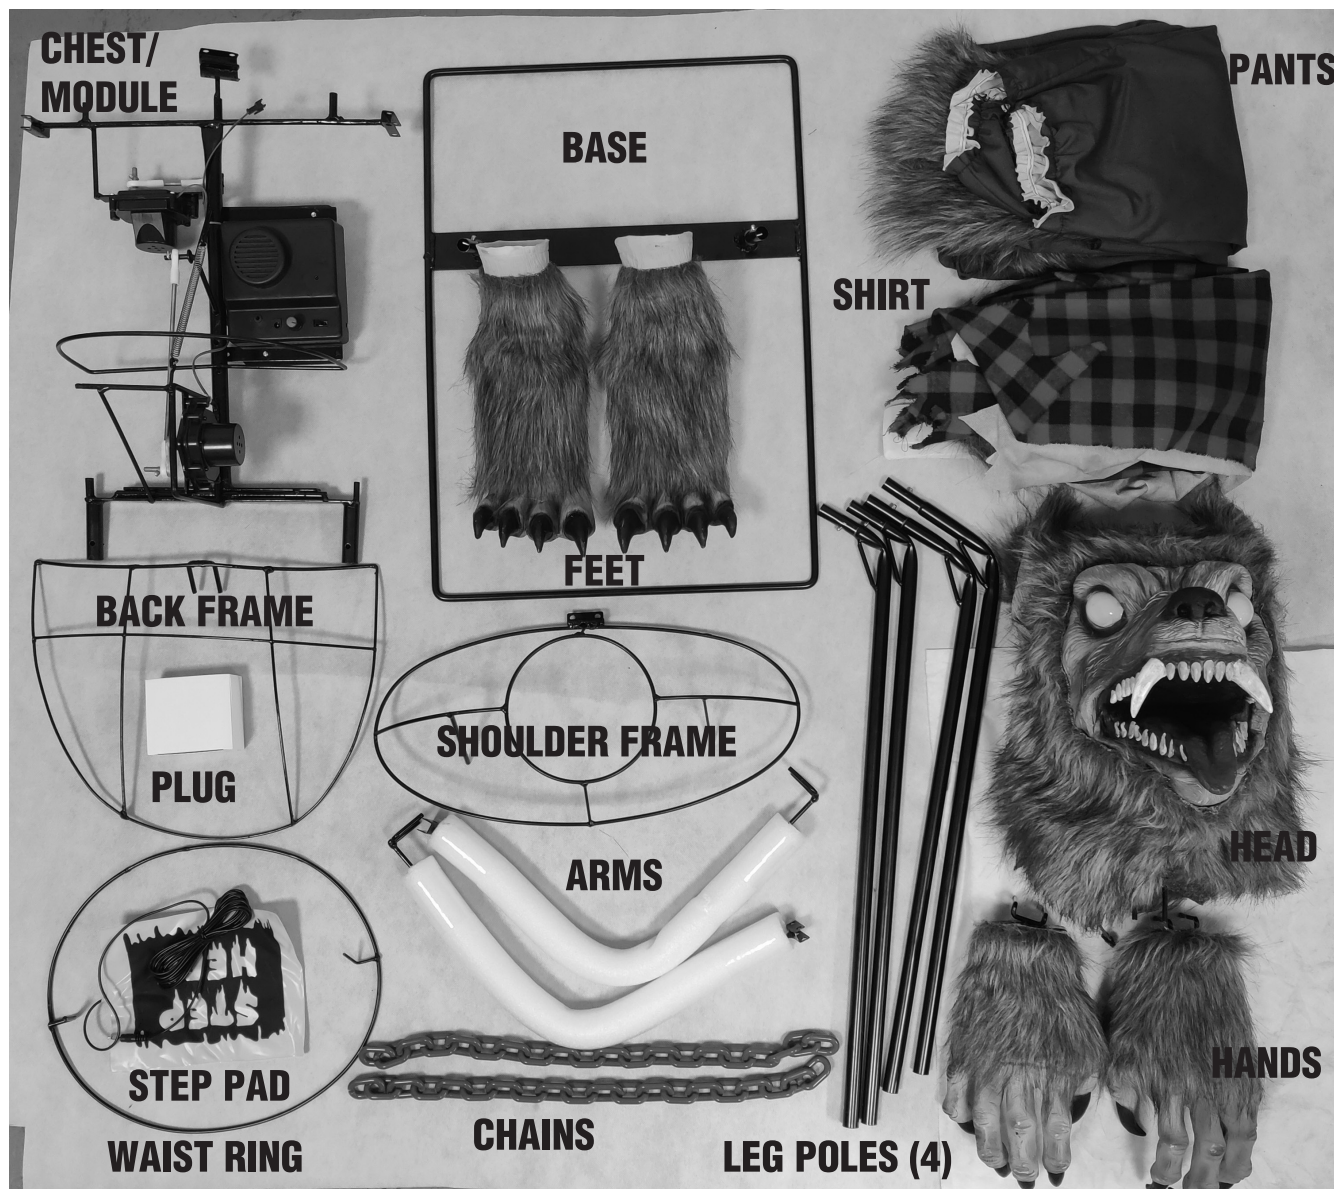

ONCE ASSEMBLED AND PLUGGED-IN, WEREWOLF WILL HAVE AUDIO, LIGHT-UP EYES, MOVING MOUTH AND MOVING UPPER-BODY. ITEM WORKS WITH OR WITHOUT STEP PAD. WHEN POWER SWITCH IS SET TO ON, WEREWOLF IS ACTIVATED BY SOUND SENSOR. TO ACTIVATE BY STEP PAD, SET POWER SWITCH TO OFF. KNOB ON MODULE ADJUSTS VOLUME.

WEREWOLF WILL BE BUILT FROM THE FLOOR UP.

STEP 1

- Lay base on the floor, larger section forward.
- Build Legs by connecting lower Leg Poles (smaller L shape) to Base. Insert Leg through Feet when attaching to Base.
- Attach upper Leg Poles (larger L shape) to lower Leg Poles.



STEP 2

- Add Pants over Legs.
- Connect Chest/Module to top of Legs, with speaker facing back.
- Add Waist Ring to base of Chest/Module section.



STEP 3

- Drape Shirt over front of Chest/Module.
- Connect Shoulder Frame to top of Chest/Module.
- Connect Back Frame to Shoulder Frame.



STEP 4

- Drape Shirt over Shoulder Frame.
- Insert Arms through bottom of sleeve and connect at shoulder.



STEP 5

- Add Head to top of Shoulder Frame by inserting pegs into openings.
- Connect the wires in the Head to the wires coming from speaker box.
- Connect Hands to bottom of Arms
- Add Chains around wrists



STEP 6

- Remove Plug from white box. Go to back of WEREWOLF, insert plug into jack to the left of the volume knob.
- Insert Step Pad into jack on left (optional).

