

EASY ASSEMBLY AND OPERATION INSTRUCTIONS

FUN4246 Animated Cauldron Brew Witches



Please follow the step by step guide and enjoy your Animated Cauldron Brew Witches!

CARE AND STORAGE INSTRUCTIONS

For best performance, operate your item indoors. When not in use, store this product in its original packing. Keep away from heat and moisture.

WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

- 1. Please use the adapter supplied by manufacturer.
- 2. Please assemble item according to instructions. Connect all wires according to matching color.
- 3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep all away from the adapter, as it heats up during operation.

Please read all instructions carefully before assembling. Save this instruction sheet for future reference.

PARTS LIST

A. Base x 1
B. Lower Right Support Pole x 1
C. Lower Left Support Pole x 1
D. Right Torso Frame x 1
E. Left Torso Frame x 1
F. Hip Hoop x 2
G. Shoulder Frame x 2
H. Right Costume x 1
I. Left Costume x 1
J. Left Witch Right Arm x 1
K. Left Witch Left Arm x 1
L. Right Witch Right Arm x 1
M. Right Witch Left Arm x 1
N. Right Head x 1
O. Left Head x 1
P. Inner Cauldron Frame x 1
Q. Outer Cauldron Frame x 1
R. Cauldron Fabric x 1
S. Cauldron Gauze x 1
T. Stirring Stick x 5
U. Stirring Stick Top x 1
V. Right Belt x 1
W. Left Belt x 1
X. Left Cape x 1
Y. Right Cape x 1
Z. Right Hat x 1
Z1. Left Hat x 1
Z2. Adapter x 1

Input: 100 - 240V AC 50/60Hz
Output: 5.9V 2.0A

BEFORE ASSEMBLING, REMOVE ALL THE ABOVE PARTS FROM BOX. IF ANY PART IS MISSING, DO NOT ATTEMPT TO ASSEMBLE THE PRODUCT AND CONTACT CUSTOMER SERVICE AT CUSTOMERSERVICE@SVIUS.COM, OR BY PHONE FROM 8:30AM TO 5:30PM PST AT 1-855-428-3921.

Assembly Instructions:

STEP 1

Connect the (B) Lower Right Support Pole to the right side of the (A) Base by using the available quick connect push button and pre-drilled hole. Then connect the (C) Lower Left Support Pole to the left side of the (A) Base by using the available quick connect push button and pre-drilled hole as shown in Figure 1.1.


Secure both (B, C) Lower Support Poles in place by lifting the support struts available from the (A) Base and sliding them into the housings available on the sides of the (B,C) Lower Support Poles as shown in Figure 1.2.

Attach the (D) Right Torso Frame to the (B) Lower Right Support Pole using the available quick connect push button and pre-drilled hole as shown. Then connect the (E) Left Torso Frame to the (C) Lower Left Support Pole using the available quick connect push button and pre-drilled hole as shown in Figure 1.3.

STEP 2

Lower the (F) Hip Hoops over each (D, E) Torso Frame and slide the forked hook ends into the forked hook housings available on the (D, E) Torso Frames as shown in Figure 2.1.

Slide the prongs of each (G) Shoulder Frame into the housings available on each (D, E) Torso Frame as shown in Figure 2.2.

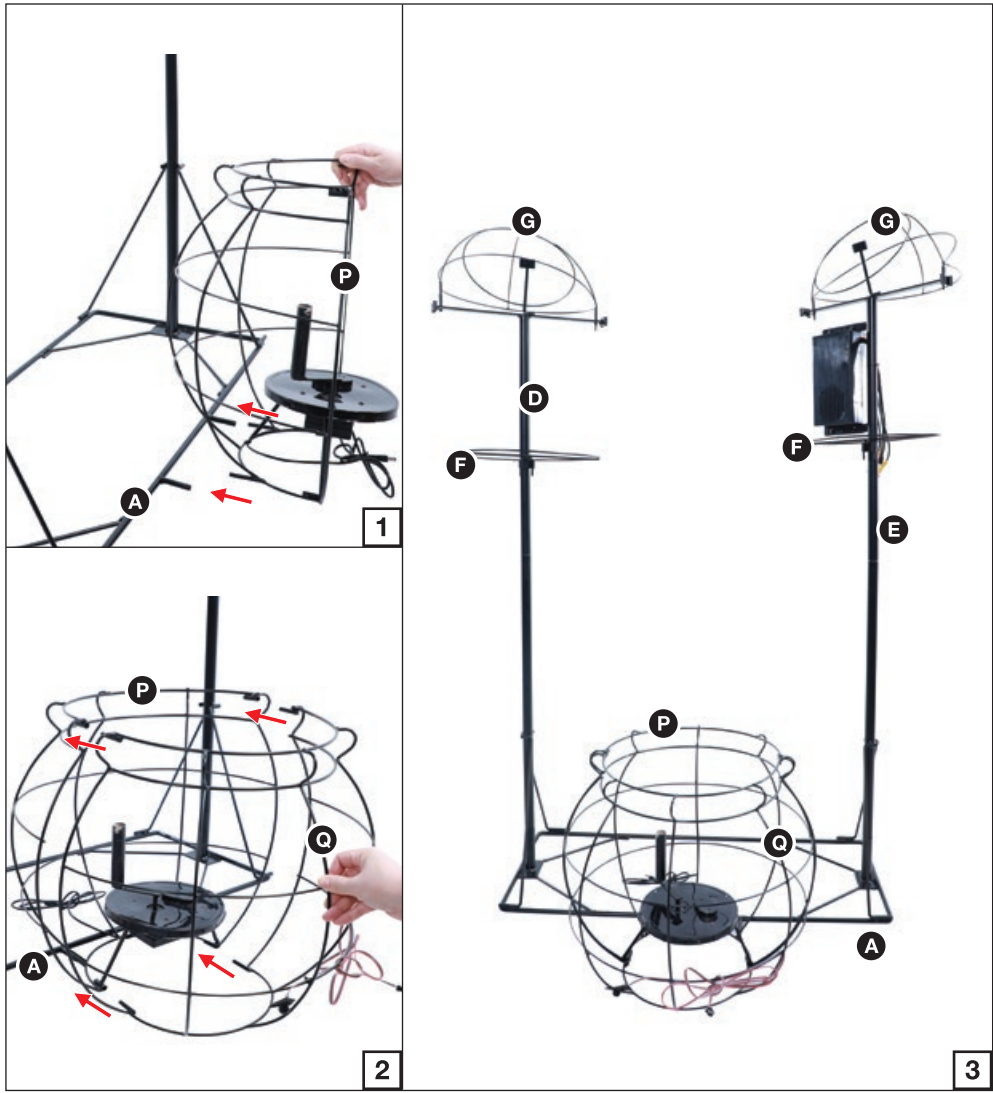


STEP 3
Slide the prongs of the (P) Inner Cauldron Frame into the housings available on the (A) Base as shown in Figure 3.1. Then slide the prongs available on the (Q) Outer Cauldron Frame into the housings available on the (P) Inner Cauldron Frame as shown in Figure 3.2.




STEP 4
Position the (R) Cauldron Fabric in front of the (P, Q) Cauldron Frame with the hook and loop closure facing the cauldron as shown in Figure 4.1. First, attach the sensor hole of the (R) Cauldron Fabric over the Sensor available at the front of the (Q) Outer Cauldron Frame using the available hook and loop closures as shown in Figure 4.2. Wrap the (R) Cauldron Fabric around to the back of the (P, Q) Cauldron Frame and secure in place using the available hook and loop closures as shown. Secure the (R) Cauldron Fabric to the top of the (P, Q) Cauldron Frame by using the available hook and loop closures as shown in Figure 4.4.



STEP 5
Stretch open the elastic of the (S) Cauldron Gauze and fit it over the top of the cauldron as shown in Figure 5.1. Ensure that the (S) Cauldron Gauze is not blocking the sensor. Then place the (H) Right Costume over the frame assembly on the right with the opening of the costume at the back. Place the (I) Left Costume over the frame assembly on the left with the opening of the costume at the back as shown in Figure 5.2.

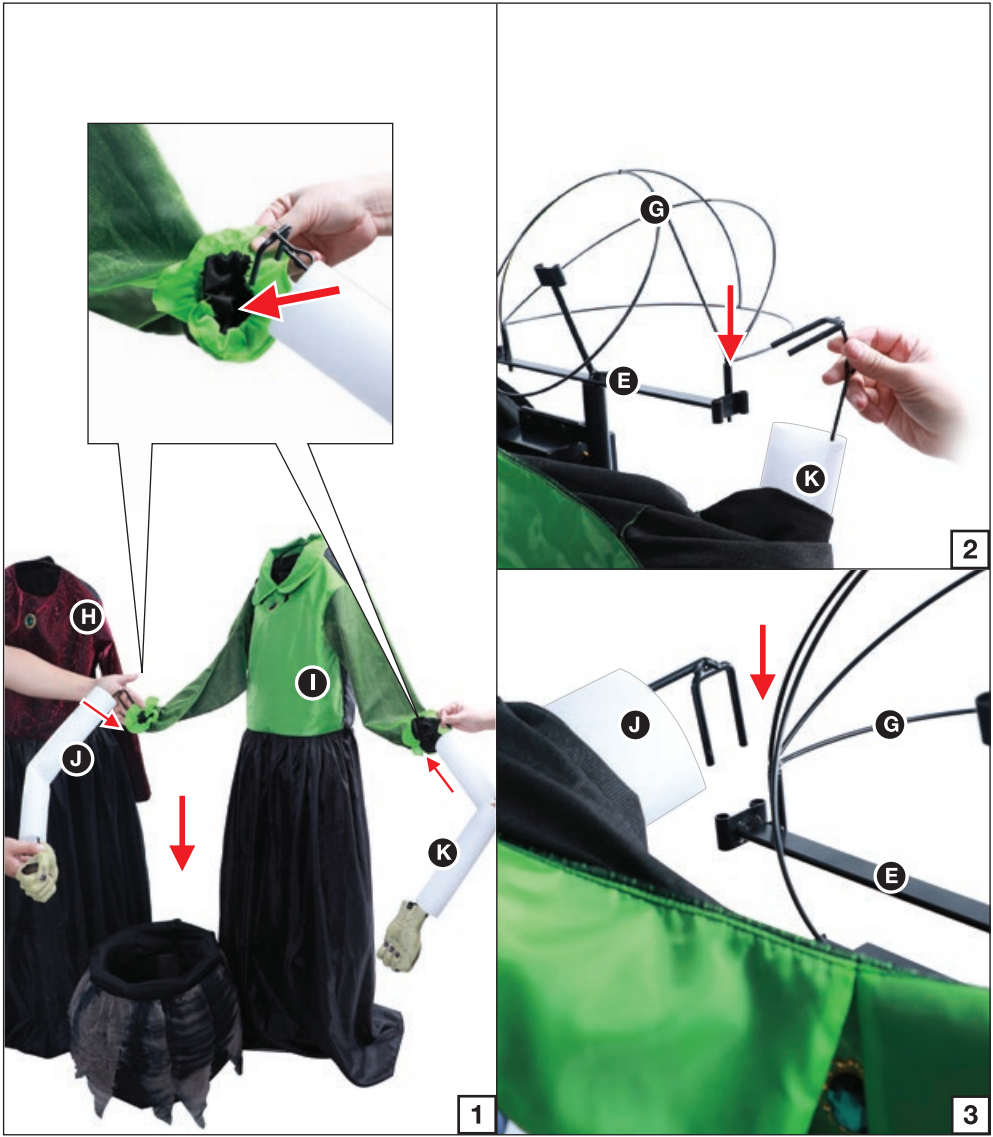

STEP 6
Slide the (J) Left Witch Right Arm into the right sleeve of the (I) Left Costume and set the forked hook available on the (J) Left Witch Right Arm into the housing available on the right side of the (E) Left Torso Frame as shown in Figures 6.1 and 6.3. Then Slide the (K) Left Witch Left Arm up the left sleeve of the (I) Left Costume and set the forked hook available on the (K) Left Witch Left Arm into the housing on the right side of the (E) Left Torso Frame as shown in Figures 6.1 and 6.2.

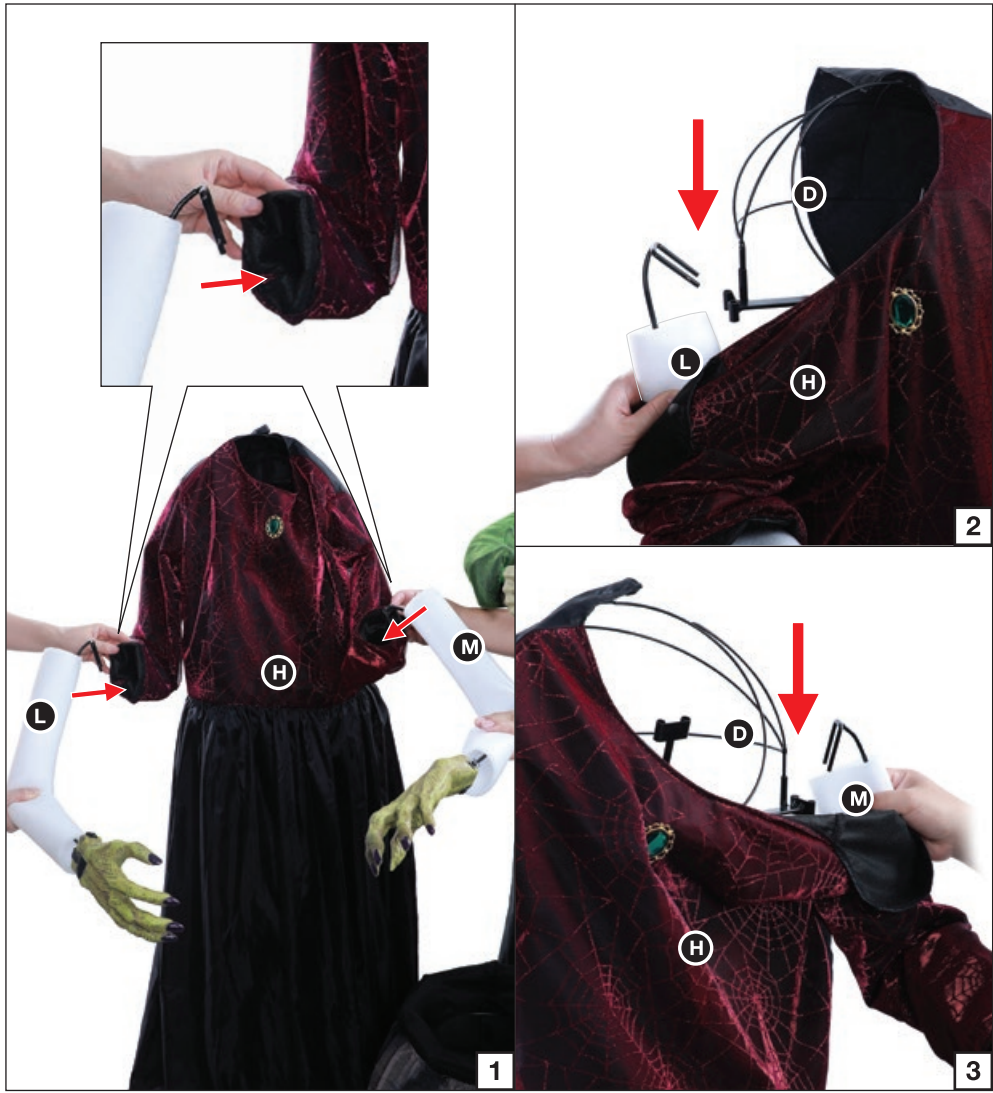

STEP 7
Slide the (L) Right Witch Right Arm into the right sleeve of the (H) Right Costume and set the forked hook available on the (L) Right Witch Right Arm into the housing available on the right side of the (D) Right Torso Frame as shown in Figures 7.1 and 7.2. Then Slide the (M) Right Witch Left Arm up the left sleeve of the (H) Right Costume and set the forked hook available on the (M) Right Witch Left Arm into the housing on the right side of the (D) Right Torso Frame as shown in Figures 7.1 and 7.3.



STEP 8
Set the forked hook of the (N) Right Head into the housing available at the top of the (D) Right Torso Frame. Then set the forked hook of the (O) Left Head onto the housing available at the top of the (E) Left Torso Frame as shown in Figure 8.1.



STEP 9
Assemble all the (T) Stirring Sticks together with an insert and turn motion, then let the lowest assembled (T) Stirring Stick fit over the pole available inside of the assembled cauldron as shown in Figure 9.1.



STEP 10
While assembling the (T) Stirring Sticks, be sure to assemble them through the hands of the (J, K) Left Witch Arms using the insert and twist motion. Then add the (U) Stirring Stick Top to the top of the assembled (T) Stirring Sticks using the insert and twist motion as shown in Figure 10.1.



STEP 11
Connect all cables available on the Function Control Box available on the (E) Left Torso Frame to their corresponding cable by shape and color as shown in Figure 11.1. Then close the back of the (I) Left Costume using the available hook and loop closures as shown in Figure 11.2.



STEP 12
Secure all sleeve cuffs to their corresponding wrists. When attaching the (H) Right Costume to the (L, M) Right Witch Arms, be sure to connect them using the available hook and loop closures. The (I) Left Costume sleeves will fit onto the wrists of the (J, K) Left Witch Arms by using the elastics built into the cuffs as shown in Figure 12.1.



STEP 13
Place the (Y) Right Cape over the right witch's shoulders and secure the hook and loop closure available on either side of the (Y) Right Cape in front of the neck. Then wrap the (V) Right Belt around the waist of the right witch and secure the hook and loop closure behind the right witch. Place the (X) Left Cape onto the shoulders of the left witch and attach to the (I) Left Costume using the available hook and loop closures. Then wrap the (W) Left Belt around the left witch and attach the hook and loop closures behind the witch as shown in Figure 13.1.



STEP 14
Place the (Z) Right Hat onto the (N) Right Head and attach using the available hook and loop closures. Then place the (Z1) Left Hat onto the (N) Left head using the available hook and loop closures as shown in Figure 14.1.

OPERATION INSTRUCTIONS:

1. Plug the power adapter into a standard power outlet and adjust the settings on the Function Control Box, located on the Torso Frame, as desired.

2. Settings:

Sensor /Détecteur	This switch mode will activate lights, sound, and animation when the Infra-red (IR) sensor is activated and will operate for 1 audio-cycle with each activation. The Infra-red (IR) sensor has a range of up to 2 m/6.5 ft. and will activate when someone comes within an 80-degree angle from left-to-right, as well as from above and below.
○/OFF	This switch mode will turn the lights, sounds, and animation off.
I / ON	This switch mode will continuously operate the lights, sound, and animation of the item.
	Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off .

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver, connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.
Seasonal Visions International, Emeryville, CA 94608 (1-855) 428-3921.

