

FUN4247 Butler Greeter





For best performance, operate your item indoors. When not in use, store this product in its original packing. Keep away from heat and moisture.

1. Please use the adapter supplied by the manufacturer.
2. Please assemble the item according to the instructions. Connect all wires according to their matching color.
3. Children should be supervised by adults. The item should not be grabbed, as it becomes a tipping hazard. Keep away from the adapter, as it heats up during operation.

Please read **all** instructions carefully before assembling. Save this instruction sheet for future reference.

/4

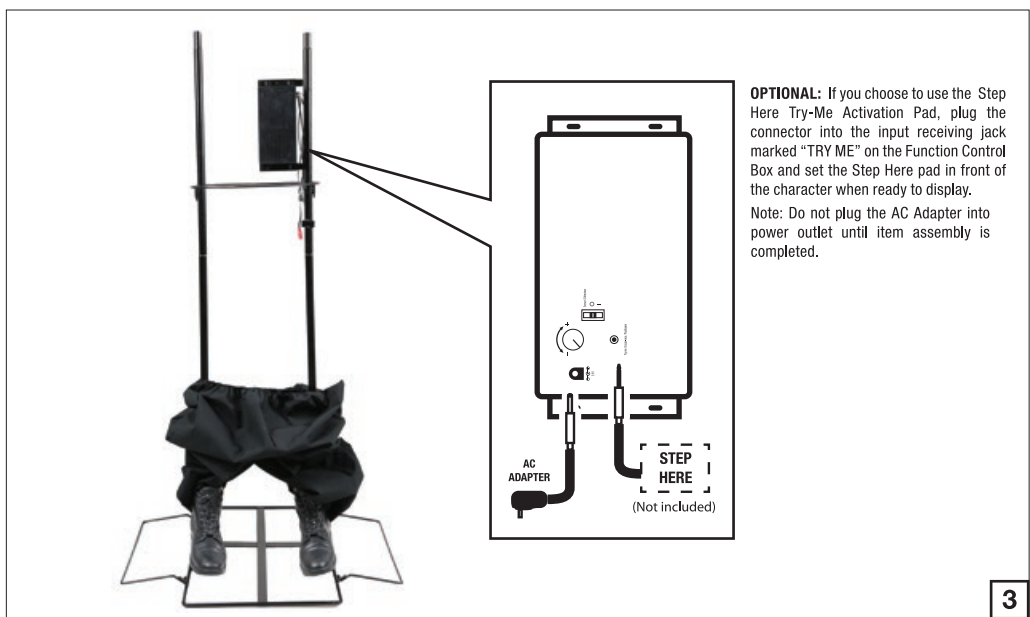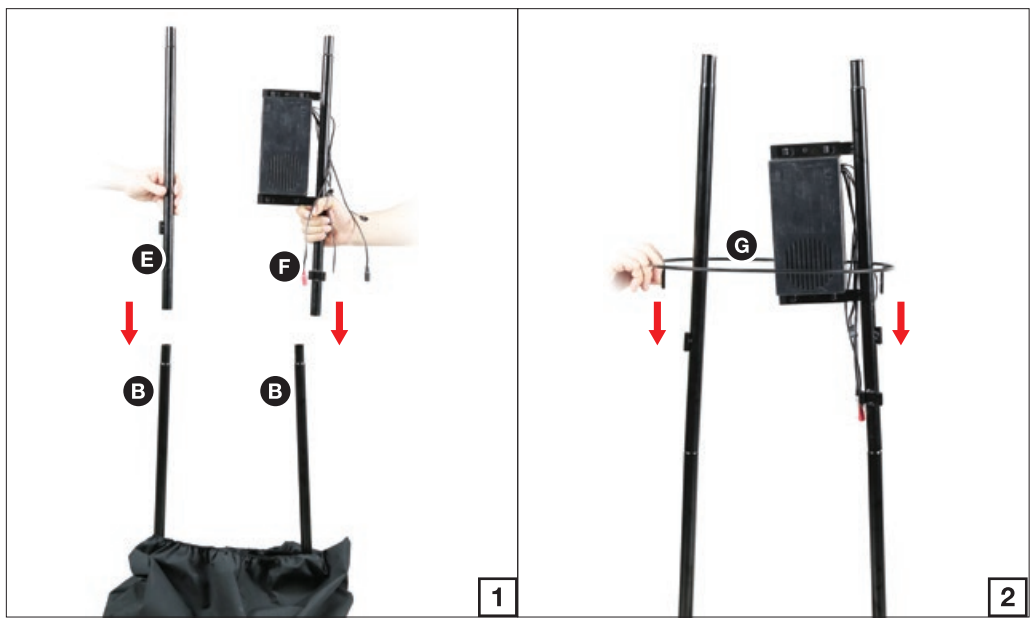


STEP 3
Assemble the (E) Upper Support Pole to the right (C) Lower Support Pole by using the available quick connect push button and pre-drilled hole. Then assemble the (F) Function Control Box Support Pole to the left (C) Lower Support Pole by using the available quick-connect push button and pre-drilled hole as shown in Figure 3.1.
Lower the (G) Hip Hoop over the assembly and slide into the housings available on the (E) Upper Support Pole and the (F) Function Control Box Pole as shown in Figure 3.2.



STEP 4
Bring the (D) Pants up to the (G) Hip Hoop as shown in Figure 4.1.
Then lower the (H) Dress Shirt over the assembly and let it rest on the (D) Pants as shown in Figure 4.2.




STEP 5
Connect the (I) Shoulder Frame to the (E) Upper Support Pole and (F) Function Control Box Support Pole using the available quick-connect push buttons and the pre-drilled holes as shown in Figure 5.1.
Then lower the forked hook housing available on the (J) Head over the forked hook available on the (I) Shoulder Frame as shown in Figure 5.2.

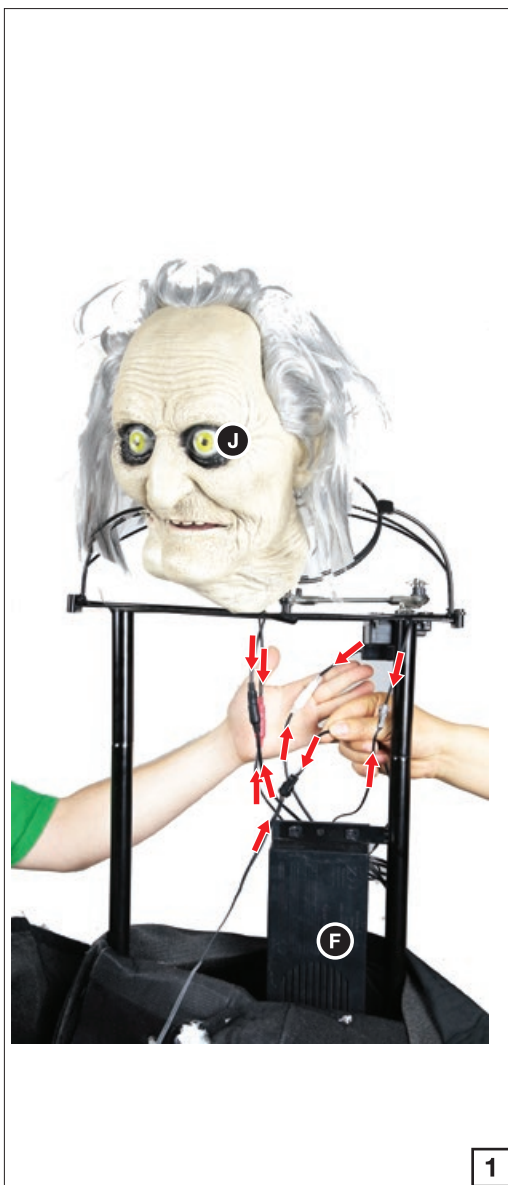


STEP 6
Connect all cables from the Function Control Box to their corresponding cable as shown in Figure 6.1.
Then bring the (H) Dress Shirt up over the (I) Shoulder Frame as shown in Figure 6.2.



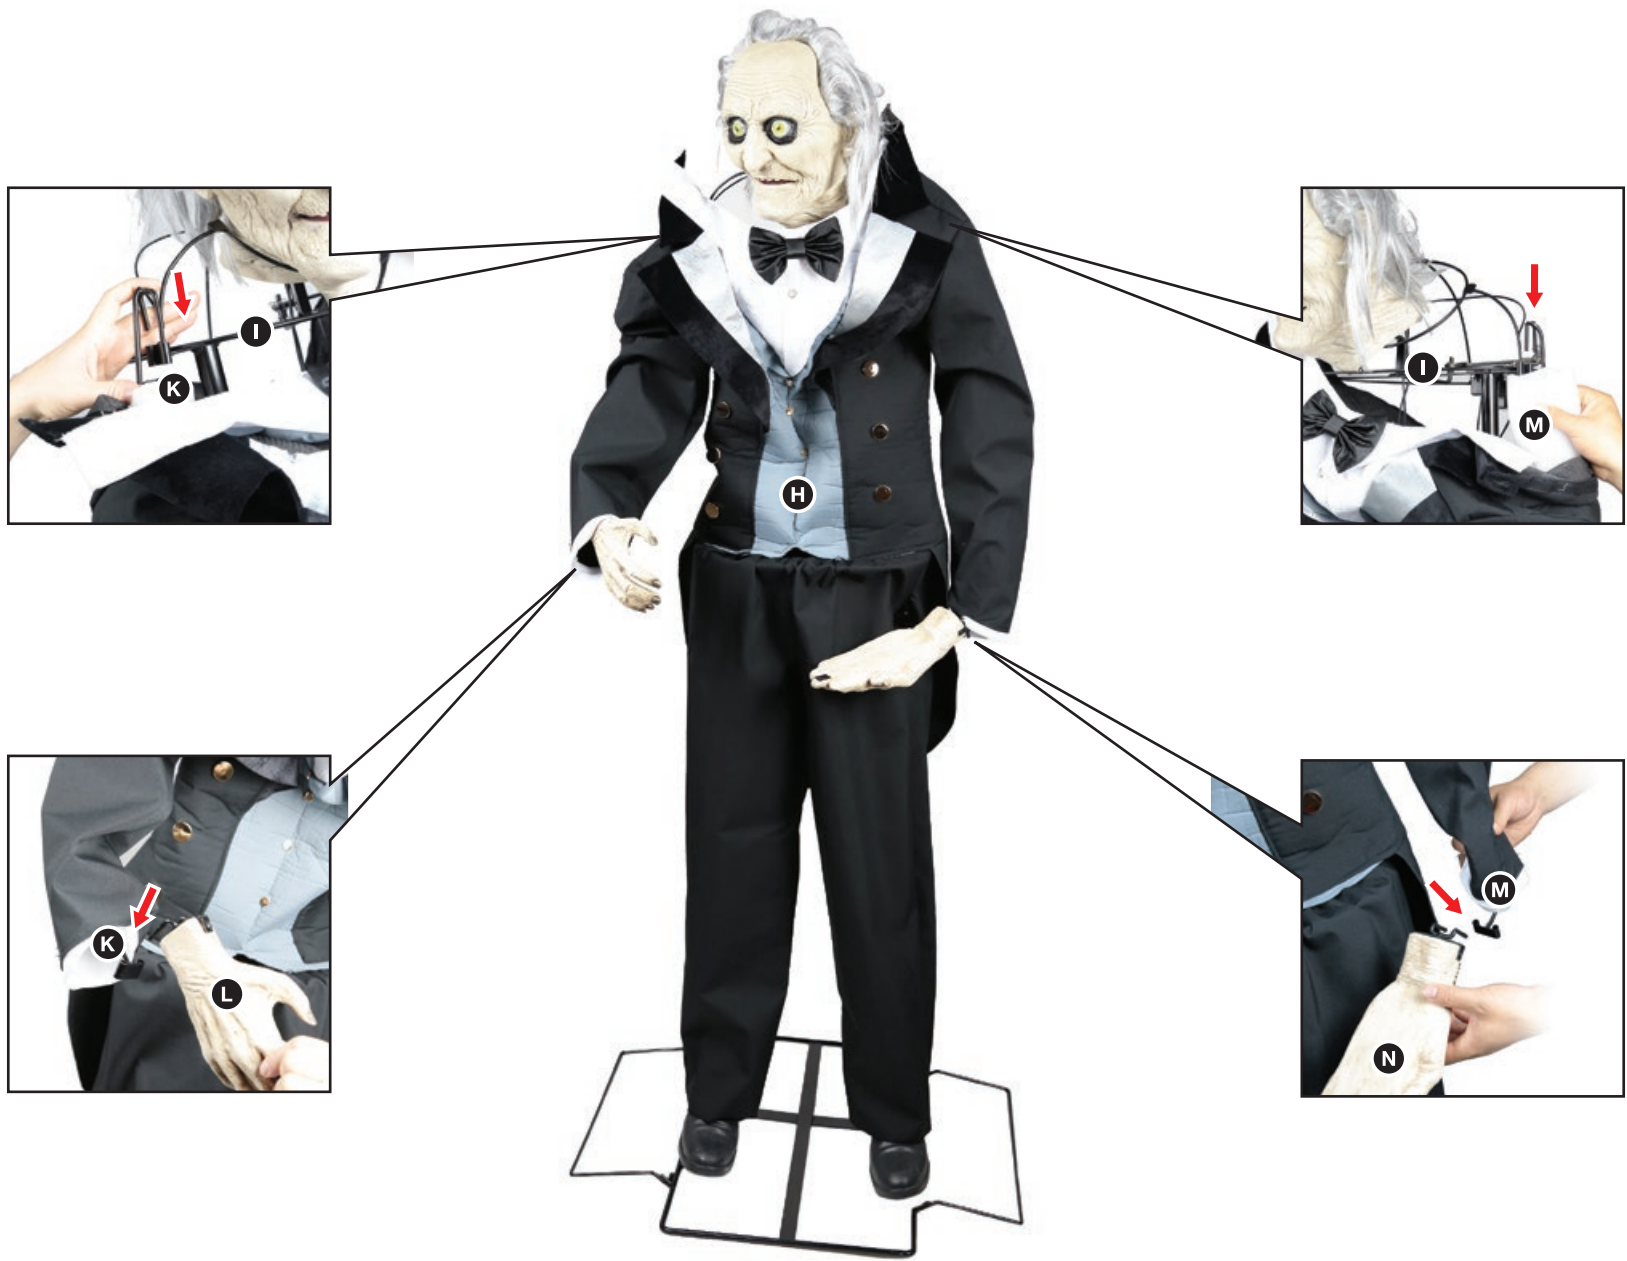

STEP 7

Slide the (K) Right Arm up the right sleeve of the (H) Dress Shirt and secure using the forked hook and forked hook housing available on the (K) Right Arm and (I) Shoulder Frame. Then connect the forked hook of the (L) Right Hand to the forked hook housing of the (K) Right Arm. Slide the (M) Left Arm up the left sleeve of the (H) Dress Shirt. Then attach by using the forked hook and forked hook housing available on the (M) Left Arm and the (I) Shoulder Frame. Then slide the forked hook of the (N) Left Hand into the forked hook housing of the (M) Left Arm as shown in Figure 7.1.

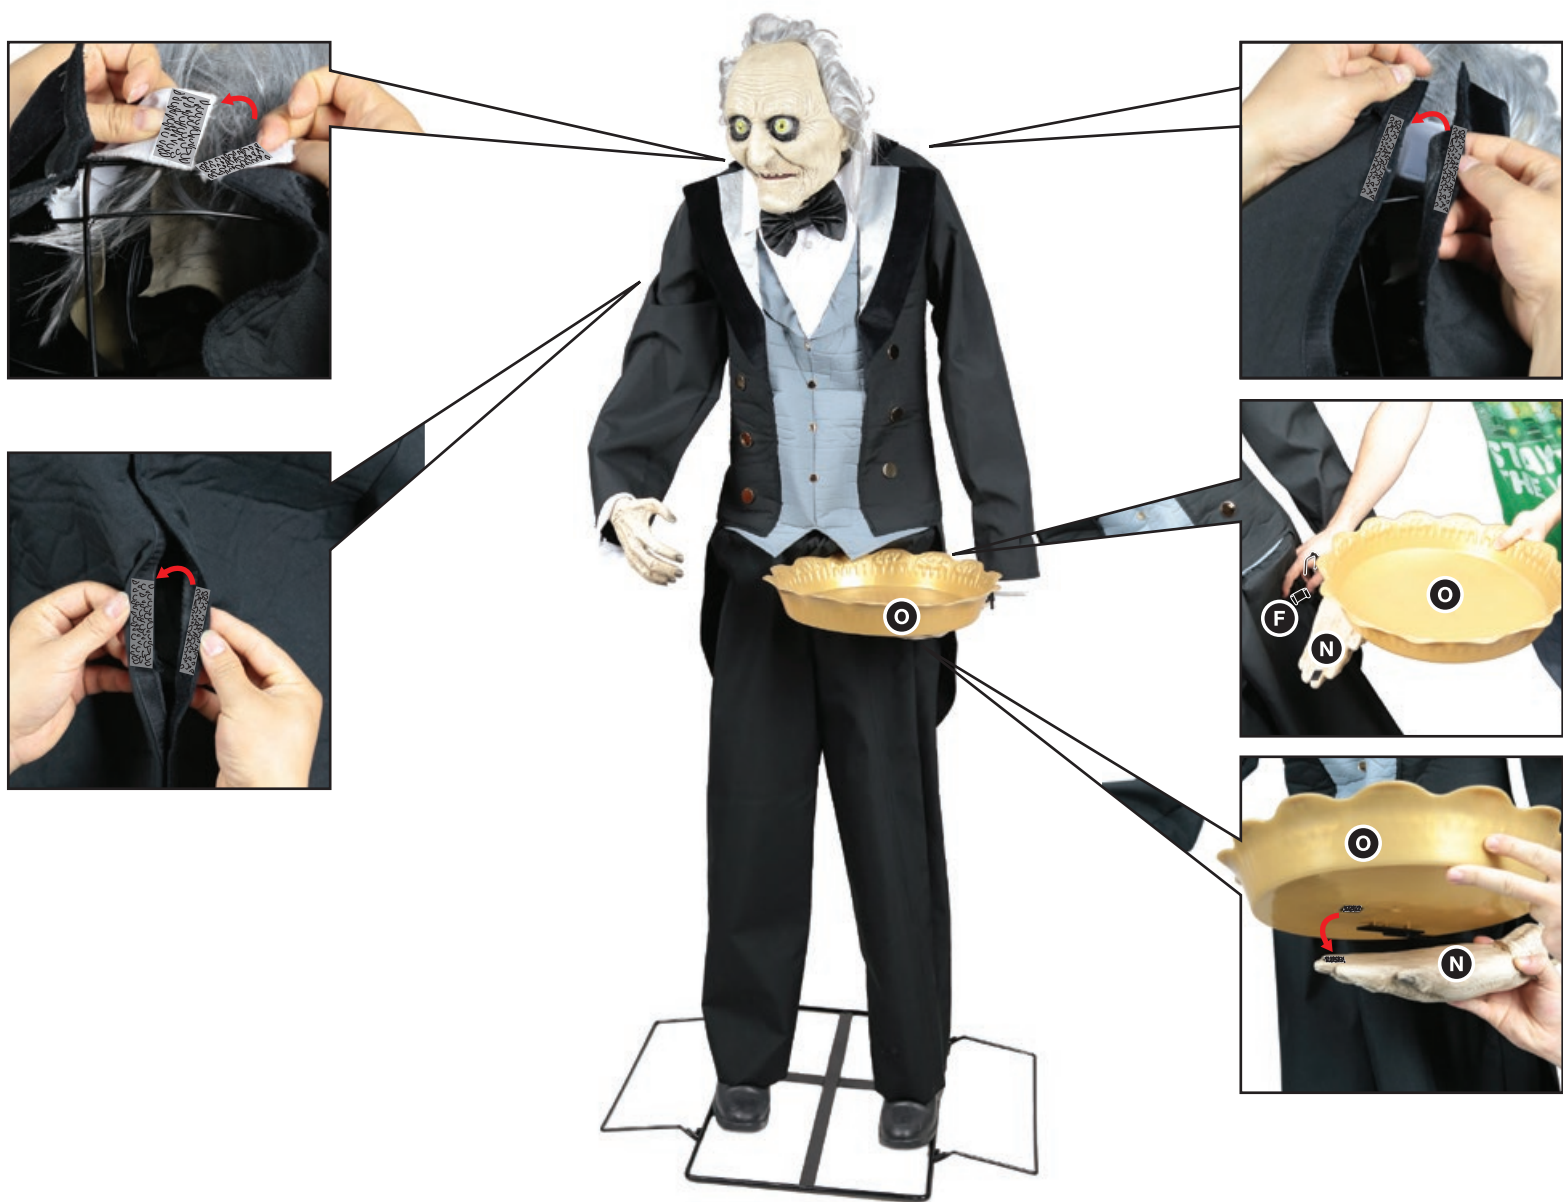

STEP 8

Use the hole in the (D) Pants to locate the forked hook housing on the (F) Function Control Box Support Pole. Slide the forked hook of the (O) Serving Tray into the forked hook housing of the (F) Function Control Box Support Pole. Secure the (N) Left Hand to the (O) Serving Tray by using the hook and loop closure provided. Close the back of the (H) Dress Shirt using the hook and loop closures provided. Your Butler Greeter is now fully assembled Plug in and turn on to let the fun begin!



OPERATION INSTRUCTIONS:

- 1. Plug the power adapter into a standard power outlet and adjust the settings on the Function Control Box, located on the Torso Frame, as desired.
- 2. Settings:

Sensor	This switch mode will activate lights, sound, and animation when the Infra-red (IR) sensor is activated and will operate for 1 audio-cycle with each activation. The Infra-red (IR) sensor has a range of up to 2 m/6.5 ft. and will activate when someone comes within an 80-degree angle from left-to-right, as well as from above and below.
○/OFF	This switch mode allows the item to be activated only if triggered by using a Step Here Try Me Activation Pad (Sold Separately). The item will operate for one audio cycle with each Try Me activation. Refer to Assembly Instructions Step3 for further details.
I / ON	This switch mode will continually operate the lights, sound, and animation of the item.
	Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off .

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver, connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

Seasonal Visions International, Emeryville, CA 94608 (1-855) 428-3921.

