

EASY ASSEMBLY AND OPERATION INSTRUCTIONS

FUN96669 Leggs the Giant Yard Spider



Please follow the step by step guide and enjoy your Leggs the Giant Yard Spider!

Please read all instructions carefully before assembling. Save this instruction sheet for future reference.

CARE AND STORAGE INSTRUCTIONS

For indoor and outdoor use. When not in use, store this product in its original packing. Keep away from heat and moisture.

⚠ WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires according to matching color.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard.
4. Keep all away from the adapter, as it heats up during operation.


PARTS LIST

- A. Base x 1
- B. Support Pole x 1
- C. Head x 1
- D. Body x 1
- E. Upper Leg Poles x 8
- F. Middle Leg Poles x 8
- G. Lower Leg Poles x 16
- H. Leg Covers x 8
- I. Stakes x 4



BEFORE ASSEMBLING, REMOVE ALL THE ABOVE PARTS FROM BOX. IF ANY PART IS MISSING, DO NOT ATTEMPT TO ASSEMBLE THE PRODUCT AND CONTACT CUSTOMER SERVICE AT CUSTOMERSERVICE@SVICHINA.COM



Assembly Instructions:

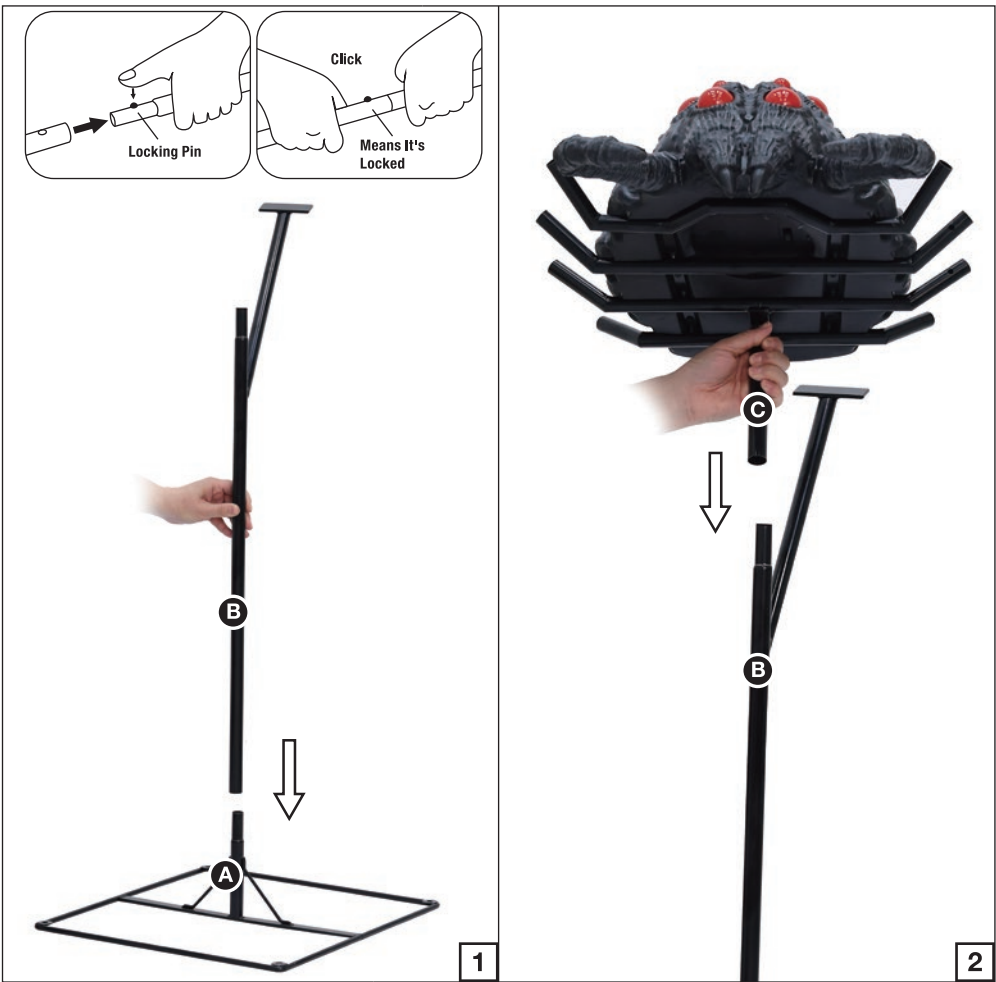

STEP 1
NOTE: Throughout the instructions, left and right are from the character's point of view. Attach the (B) Support Pole to the (A) Base using the available quick connect push button and pre-drilled hole as shown in Figure 1. Attach the (C) Head to the (B) Support Pole using the available quick connect push button and pre-drilled hole as shown in Figure 2.





STEP 2
Attach (D) Body to the (C) Head as shown in Figure 1. Then connect all the (E) Upper Leg Poles to the (C) Head using the available quick connect push buttons and pre-drilled holes as shown in Figure 2.

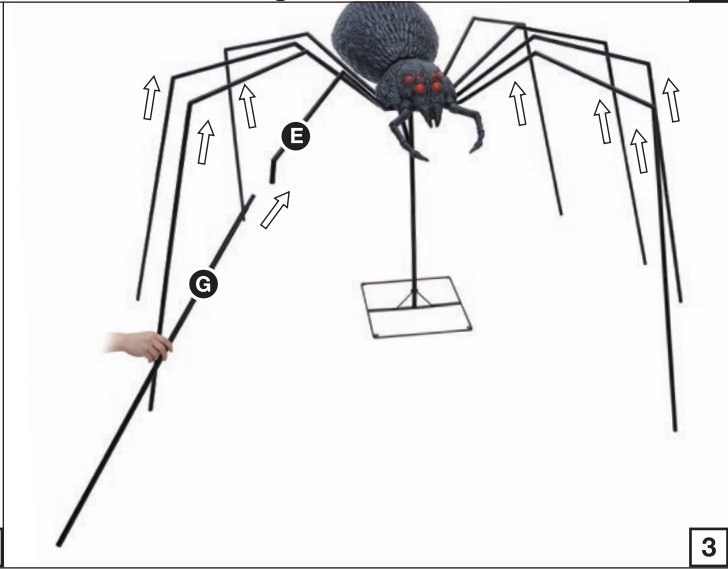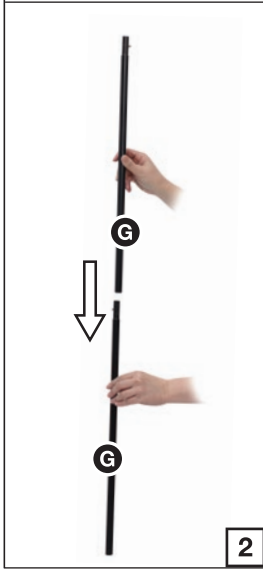


STEP 3

Attach all the (F) Middle Leg Poles to the (E) Upper Leg Poles using the quick connect push buttons and pre-drilled holes as shown in Figure 1. Assemble 2 pieces each of the (C) Lower Leg Poles, to form lower legs as shown in Figure 2, then connect all 8 assembled Lower Legs to the (E) Middle Leg Poles using the quick connect push buttons and pre-drilled holes as shown in Figure 3.

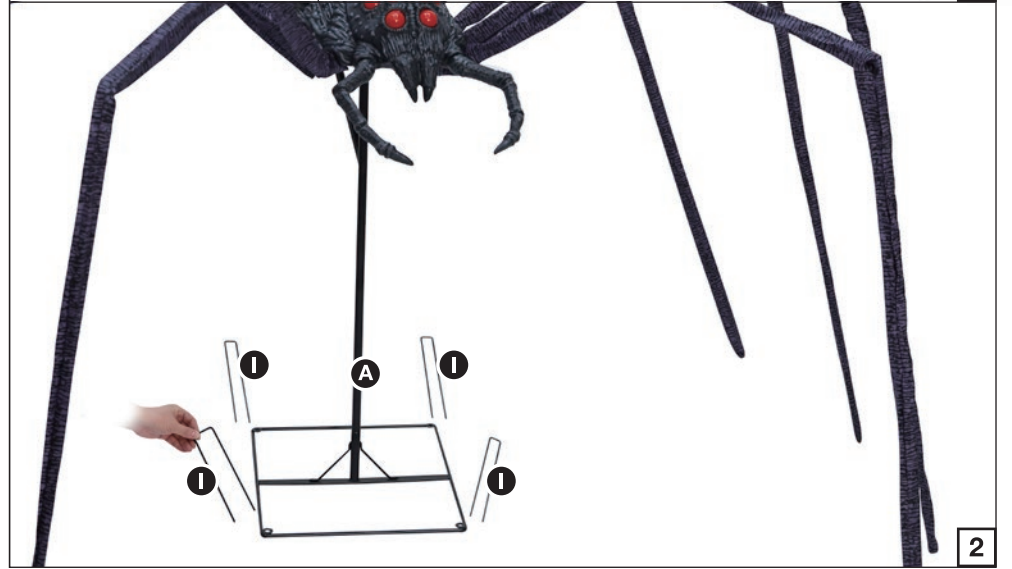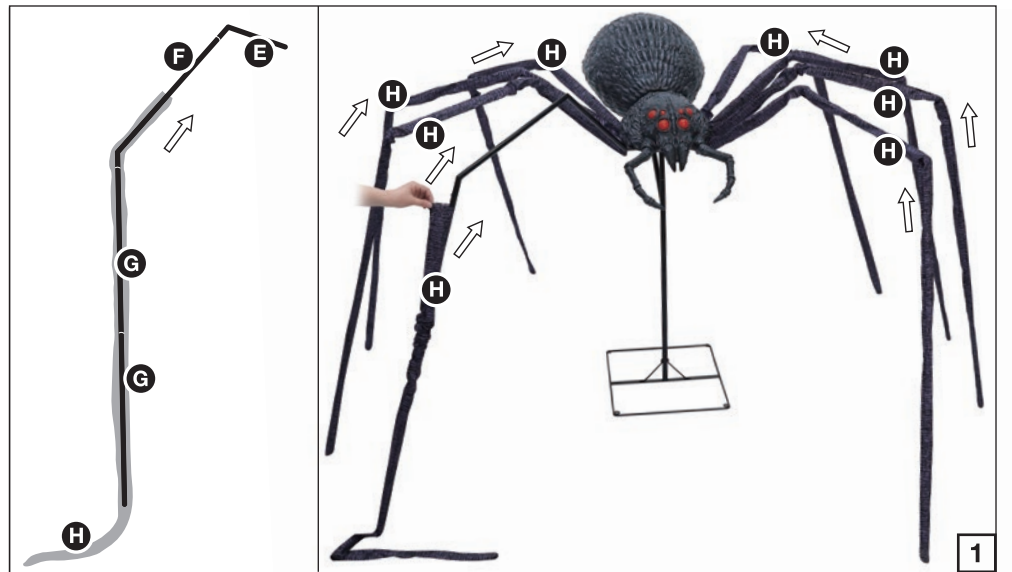

STEP 4

Slide all 8 of the (H) Leg Cover one by one up to each of the assembled legs as shown in Figure 1. If your prop is placed on a soft-flat ground, you can use the provided (I) Stakes and plunged them on the 4 corners of the (A) Base for added stability as shown in Figure 2.

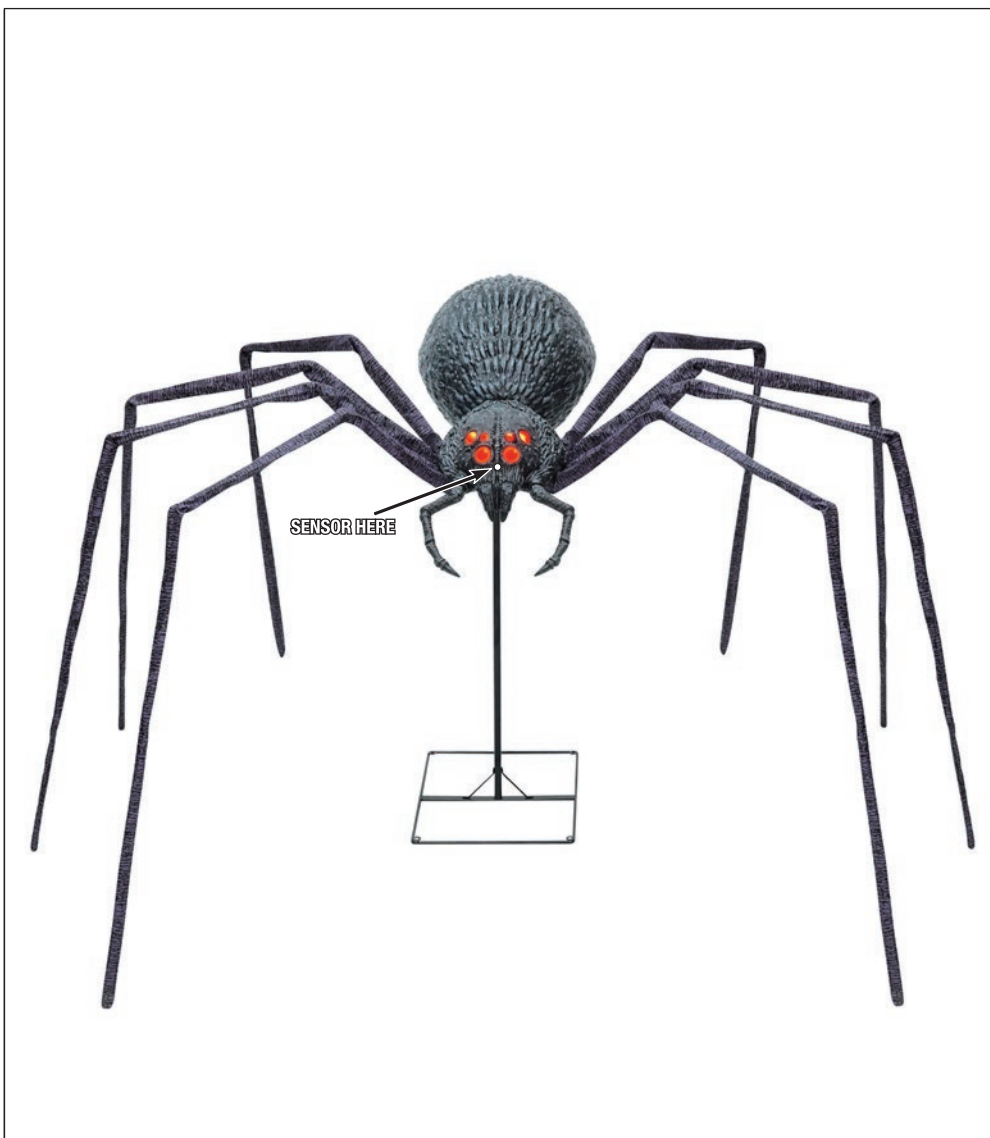

STEP 5

Your Leggs the Giant Yard Spider is now fully assembled. Turn on and let the fun begin!

OPERATION INSTRUCTIONS


SENSOR	This switch mode will activate lights and sound when the Infra-red (IR) sensor is activated and will operate for one activity cycle with each activation. The Infra-red (IR) sensor has a range of up to 2 meters / 6.5 ft. and will activate when someone comes within an 80-degree angle from left-to-right, as well as from above and below.
OFF	This switch mode turns off the item.
ON	This switch mode will continuously operate the lights and sound of the item.

BATTERY REPLACEMENT INSTRUCTIONS

* Requires 3 x AA (1.5V) batteries (Not Included).
* You will need a small Phillips head screwdriver (Not Included).

Remove safety screw with screwdriver, slide battery cover to open, insert new batteries observing correct polarity, replace the lid and screw - do not overtighten screw. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel cadmium) batteries. Do not mix old and new batteries. Rechargeable batteries to be removed from the product before being charged. Only batteries of the same or equivalent type as recommended are to be used. Rechargeable batteries are only to be charged under adult supervision. Non-rechargeable batteries are not to be recharged. Batteries are to be inserted with the correct polarity. Remove batteries if consumed or if product is to be left unused for a long time. The supply terminals are not to be short-circuited. Dispose of batteries safely. DO NOT DISPOSE OF BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

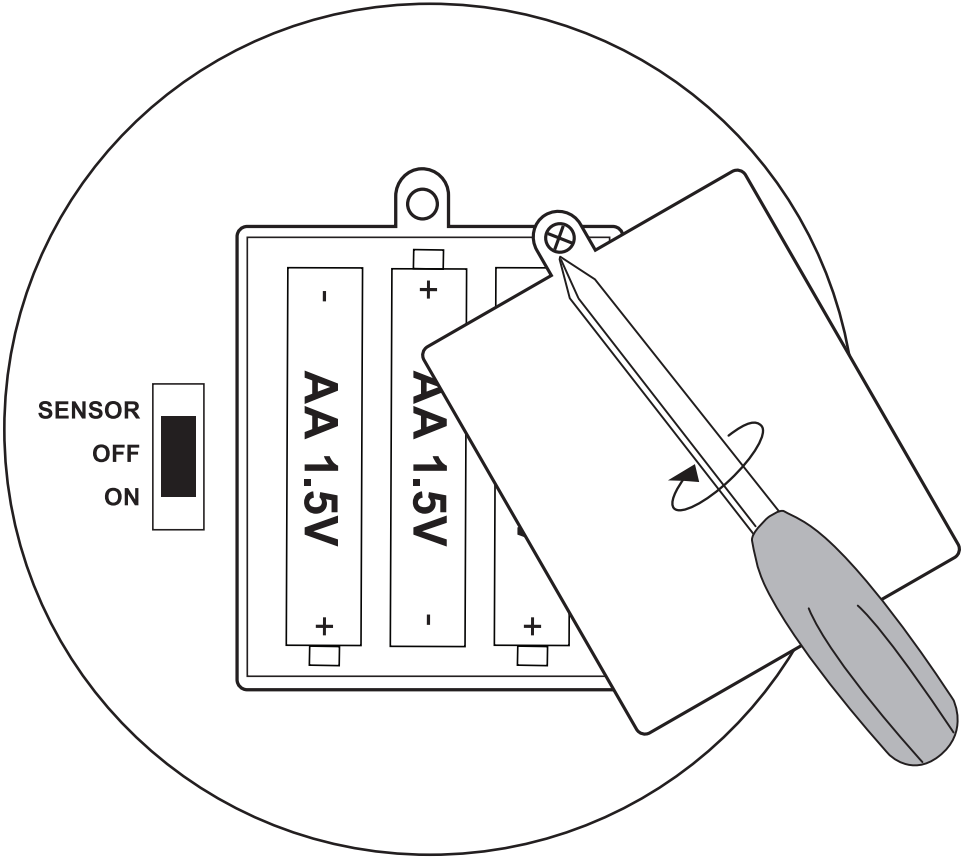

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver, Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help. Seasonal Visions International, Berkeley, CA 94710, CUSTOMERSERVICE@SVICHINA.COM

IMPORTANT SAFETY INSTRUCTIONS -SAVE THESE INSTRUCTIONS

DANGER! TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK READ AND FOLLOW ALL SAFETY INSTRUCTIONS:

Read and follow all instructions that are on the product or provided with the product. For a cord-connected or direct plug-in power unit, do not use an extension cord. Reference the National Electrical Code, NFPA 70, specifically for the installation of wiring and clearances from power and lighting conductors. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction. For a cord-connected or direct plug-in power unit, do not install or use within 10 feet of a pool.

WARNING: Risk of electric shock. When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.

WARNING: Risk of Fire. Installation involves special wiring methods to run wiring through a building structure. Consult qualified electrician.