


SWIPING SCARECROW™

INSTALLATION AND OPERATING INSTRUCTIONS


KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.

WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING.
ESTIMATED ASSEMBLY TIME: 7 MINUTES.


PARTS

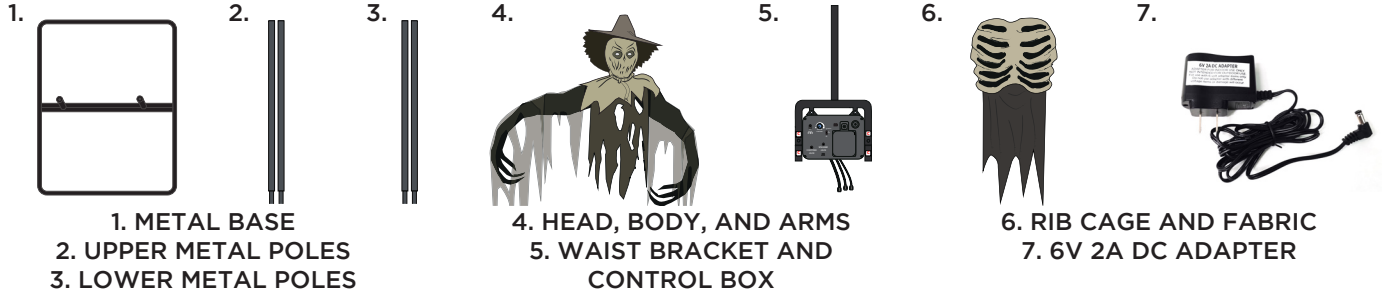


ASSEMBLY

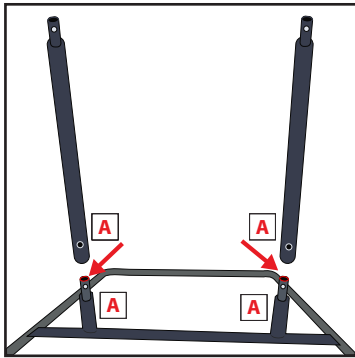


1. Snap lock LOWER METAL POLES into METAL BASE.
(MATCH A TO A)

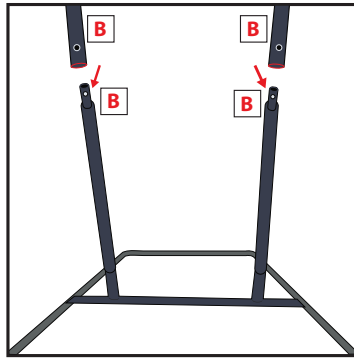


2. Snap lock UPPER METAL POLES into LOWER METAL POLES.
(MATCH B TO B)

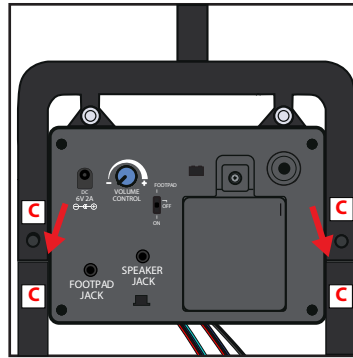

3. Insert WAIST BRACKET AND CONTROL BOX into UPPER METAL POLES.
(MATCH C TO C)

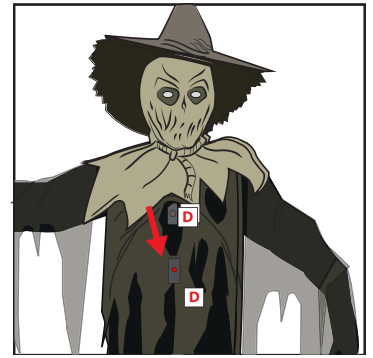


4. Take the HEAD, BODY, AND ARMS and insert the pole into the WAIST BRACKET AND CONTROL BOX.
(MATCH D TO D)

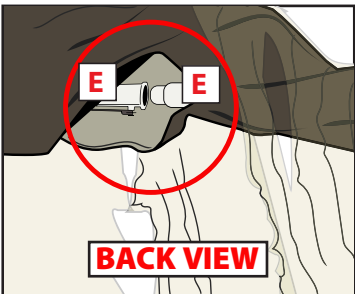


5. Connect the arm poles located inside his RIGHT sleeve under the shoulder area on the HEAD, BODY, AND ARMS.
(MATCH E TO E)



6. Attach RIB CAGE AND FABRIC to HEAD, BODY, AND ARMS using the hook and loop fasteners located underneath the burlap collar.

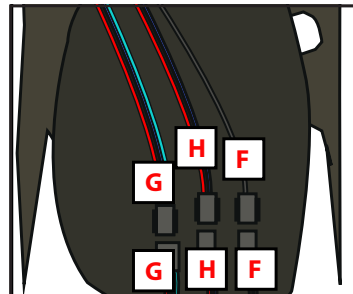


7. Reach inside the HEAD, BODY, AND ARMS and connect all three wires located inside the clothing. (MATCH F TO F - Lights In Head LED), (MATCH G TO G - Right Arm Motor), (MATCH H TO H - Motion Sensor)

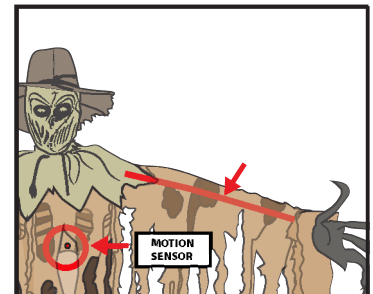

8. Gently unbend and pose his LEFT (non-moving) ARM. Make sure the motion sensor is clear from fabric and other obstructions.

ASSEMBLY

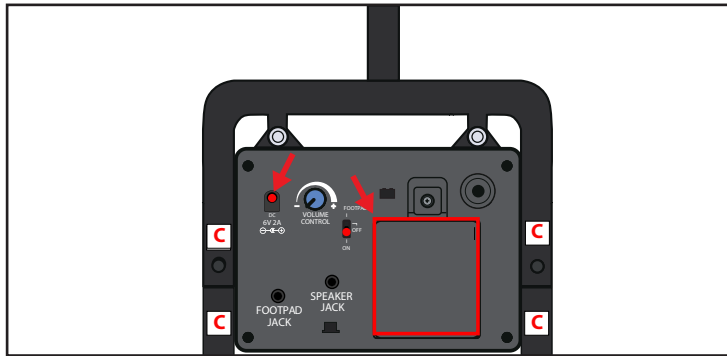

9. Reach inside the fabric on the HEAD, BODY, AND ARMS. Connect 6V 2A DC ADAPTER (included) or insert 4 AA alkaline batteries (not included) into the battery compartment located on the CONTROL BOX. Turn the switch to the ON position to activate the item. Move in front of the item or make a loud sound (clap) to activate. Turn item OFF when not in use. **WARNING: FAST MOTION. STAY CLEAR OF SWIPING ARM WHILE OPERATING!**

TROUBLESHOOTING


PROBLEM	SOLUTION
Item will not activate/Motion Sensor does not work	Ensure motion sensor located on the front of the chest is not blocked by fabric or any other obstructions. To test the motion sensor, shine a flashlight in the motion sensor tube. See illustration 8.
Item will not activate/Arm will not move	Ensure all wires are connected securely and matched with the correct labels. See Illustration 7.
Sound is distorted or faint	If using batteries, replace with fresh batteries.
No sound	Ensure the volume knob is not turned all the way down.
No flaming effect in head	Ensure all wires are connected securely and matched with the correct labels. See Illustration 7.

OPTIONAL FOOTPAD SETUP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from optional footpad into the jack labeled FOOTPAD JACK on the CONTROL BOX.
2. Place the switch on the CONTROL BOX into the FOOTPAD position to enable footpad activation.
3. Step on footpad to activate the scary sequence!


Footpads are sold separately and can be purchased at www.tekkyaccessories.com

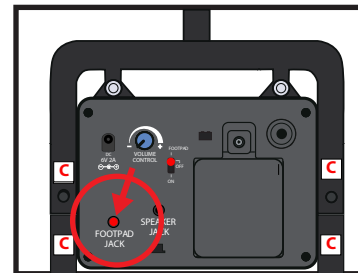


OPTIONAL EXTERNAL SPEAKER SETUP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Plug speaker cord into the jack labeled SPEAKER JACK located on the CONTROL BOX.
2. Turn the VOLUME CONTROL knob on the CONTROL BOX to highest level and use your external speaker's volume control to adjust volume level.

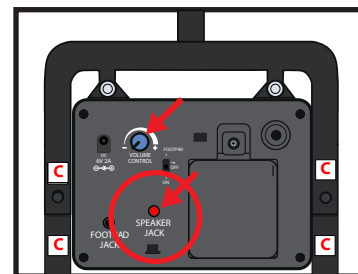

Battery Diagram

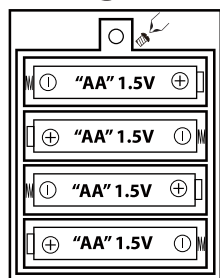

BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult.
Remove batteries when not in use.
Use only batteries recommended in the instructions.
Do not mix new and used batteries.
Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
Be mindful to insert batteries with the correct polarity (+/-) as indicated.
Remove all exhausted batteries.
Rechargeable batteries are only to be charged under adult supervision.
Rechargeable batteries are to be removed from the item before being charged.
Non-rechargeable batteries are not to be recharged.
The supply terminals are not to be short-circuited.
Always dispose of exhausted batteries properly.
Do NOT dispose of batteries in fire, they may leak or explode.

**Warning! This item is not a toy. For decoration only. Small parts, choking hazard.
This product is intended for use by persons 15 years of age and older.
Not intended for use by children ages 14 years and younger.**

WARNING

**DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.**



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to www.tekkydesign.com for assistance.



visit us at tekkydesign.com

Requires 4AA batteries (not included) or
6V 2A DC adapter (included).

ALL NEW MATERIALS:
PLASTIC, POLYESTER, METAL, FOAM.

Surface washable only.

SWIPING SCARECROW™
is a trademark of Tekky.
Copyright © 2021 Tekky
All Rights Reserved.
FUN97028

MADE IN CHINA



SMART PHONE SCAN
SETUP VIDEO

