

EASY ASSEMBLY AND OPERATION INSTRUCTIONS

FUN94410-ST Brick Thunder Dire Dragon's Head Animated Decoration

This item, when assembled by the following instructions, should take 15 minutes to assemble. Please follow the step by step guide and enjoy your Eyeball Monster Animatronic Decoration !

CARE AND STORAGE INSTRUCTIONS

For best performance operate your item indoors or in a sheltered outdoor area. We also recommend that you bring your item indoors during adverse weather (extreme cold, strong winds and/or rain). When not in use, store this product in it's original packaging. Keep away from heat and moisture.


WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children. This product is intended for people ages 14 and up.

Please read all instructions carefully before assembling. Save this instruction sheet for future reference.


PARTS LIST

A.Base 1	2PCS
B.Support poles 1	4PCS
C.Support poles 2	2PCS
D.Transverse poles	2PC
E.Backdrop	1PC
F.Base 2	1PCS
G.Support poles 3	2PC
H.Waist frame	1PC
I.Torso frame	1PC
J.Head	1PC
K.Torso frame	1PC
L.Adapter	1PC
M.Sandbag	2PCS

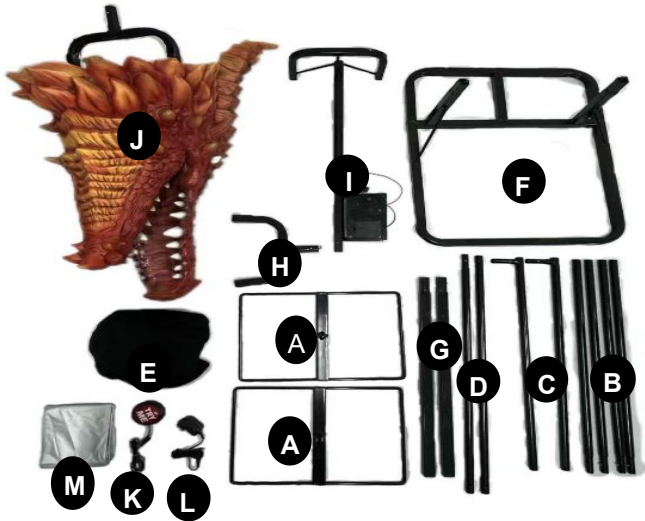


STEP 1:SETTING UP THE BACKDROP

Attach support pole(B)to the base (A) as shown and secure by aligning the quick-connect push button into the pre-drilled holes. Attach the other Support Pole (B) and (C) as shown and secure by aligning the quick-connect push button into the pre-drilled holes.Repeat the above as shown. Setting the 2 transverse poles (D) as shown and put them through the backdrop as shown,then attach them to the 2 support poles (C) as shown and secure by aligning the quick-connect secure by aligning the quick-connect push button into the pre-drilled holes. Put the sandbag (M) up the base (A),one on each side,each sandbag contains around 10 pounds of sand.

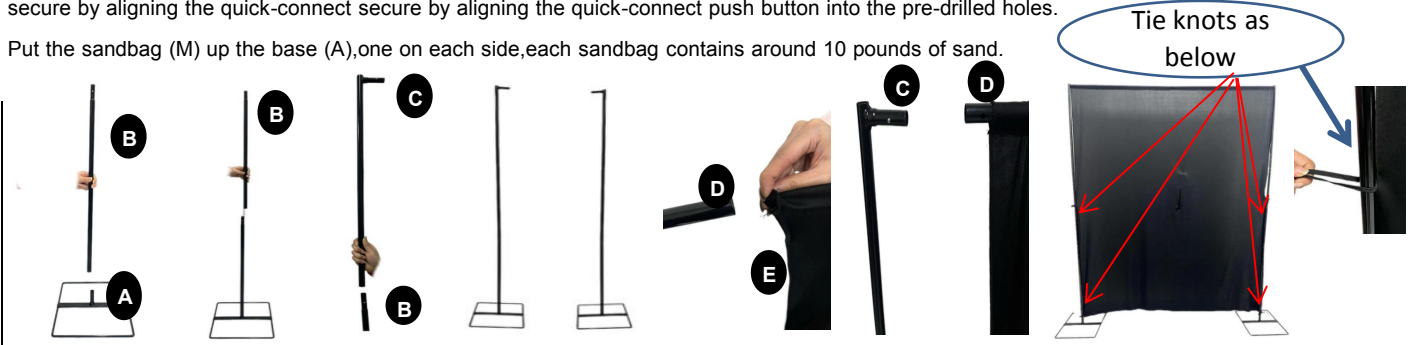



STEP 2:SETTING UP THE BASE AND SUPPORT POLES, AND ATTACHEING THE TORSO FRAME

Attach support poles(G)to the base (F) as shown and secure by aligning the quick-connect push button into the pre-drilled holes. Set the waist frame(G) to support poles D & E as shown. and secure by aligning the quick-connect push button into the pre-drilled holes. Attach the Torso Frame (I) to waist frame (G) as shown and secure by aligning the quick-connect push button into the pre-drilled holes.

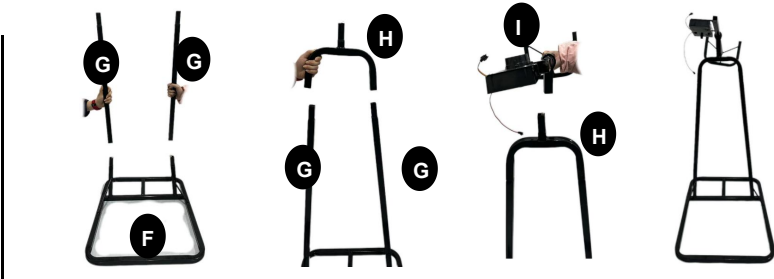

STEP 3: ATTACHING THE HEAD

 
Put the torso frame (I) through the backdrop (E) as shown. And setting the head (J) as show and secure by aligning the quick-connect push button into the pre-drilled holes. Carefully connect connector jack wired from the function box to the head.

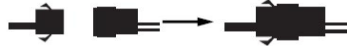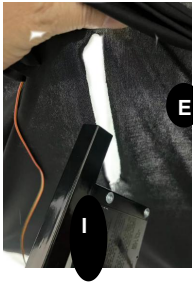**FINISH****OPERATION INSTRUCTION**

Brick Thunder Dire Dragon's Head Animated Decoration has 2 operation settings which can be the main function control box on the torso frame.

TRY ME: This setting allows the item to only be activated when you push the try me button is activated.

Sensor: This setting included sound sensor, this setting allows the item to only be activated when the sensor is activated. the item will operate for one audio-cycle with sensor activation.

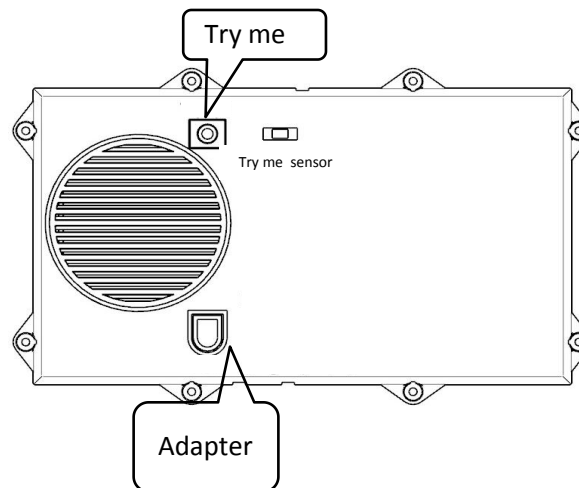**FCC**

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.